


Hinged Barn End Door
Installation Instructions

Contents and Tools Needed

Slam Latch
(Optional)
(Qty. 1)




Cane Bolt
(Optional)
(Qty. 1)



#8 x 1"
Self-Tapper
(Qty. 4)




#12 x 3/4"
Self-Tapper
(Qty. 6)

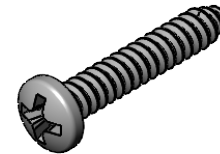

#12 x 1 1/4" PH
Wood Screw
(Optional if
Cross Bucks)
(Qty. 5per
CrossBuck)

Wood Fill
(Optional
Tongue & Groove)

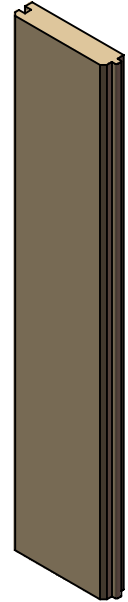


Door



1602 Airpark Drive
Farmington, Mo. 63640
573-328-2977

Tools: Cordless Drill, Tape Measure, Level
Phillips Screw Bit, Square

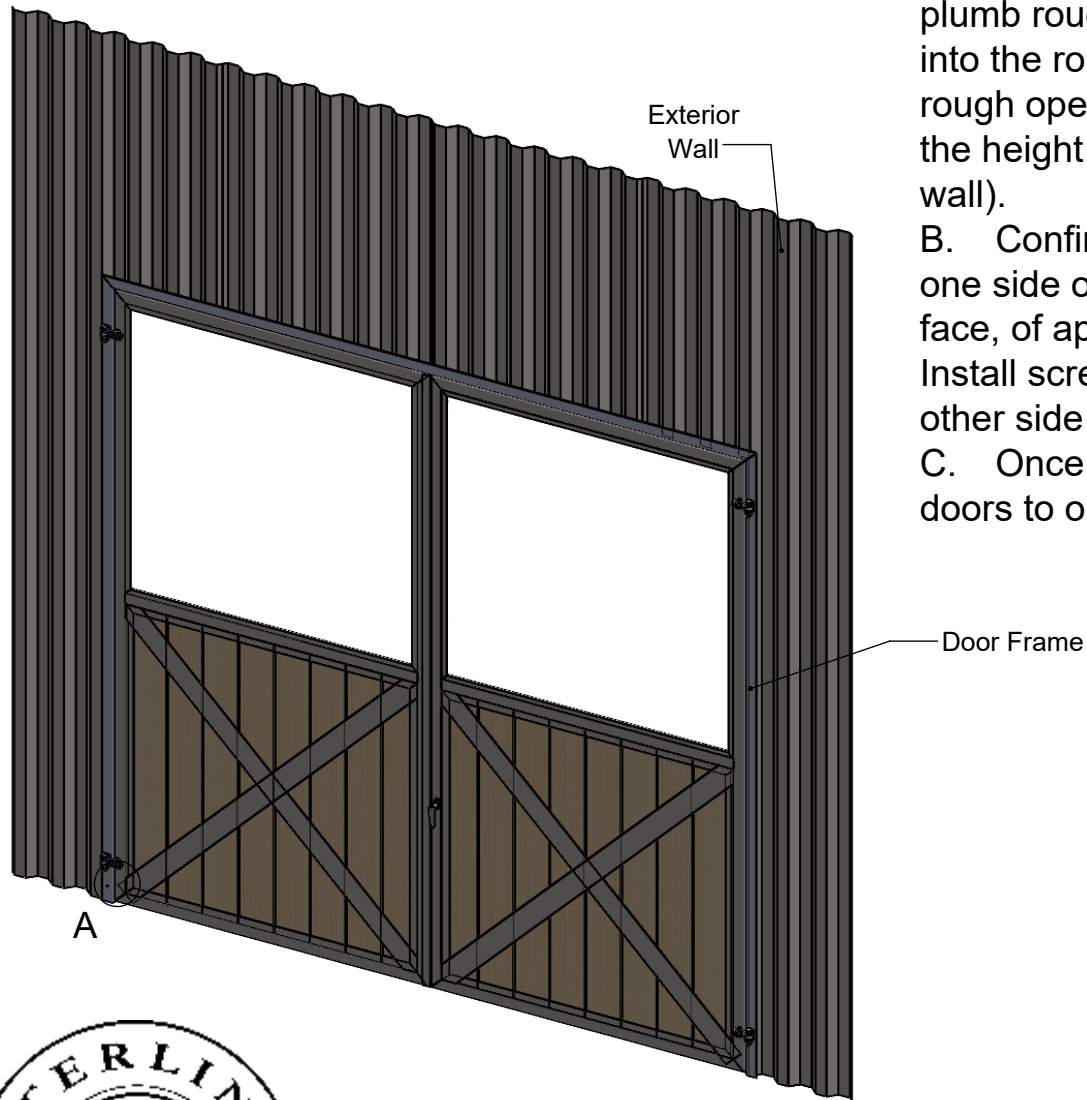


Step 1: Pre-Hung Barn End Door

A. This installation will require 2 people. Place into the level and plumb rough opening. Make sure the door is pushed all the way into the rough opening until jamb is against the building. (The rough opening should be sized approximately 1/2" larger than the height and width of the leg of the frame that inserts into the wall).



B. Confirm the door is level and in the correct location, start with one side of the door with the hinges and drill holes in the jamb or face, of appropriate size for customer supplied hardware selection. Install screws in the holes you drilled. Then move over to the other side and fasten there as well.

C. Once done you might need to adjust the hinges for the doors to open properly.

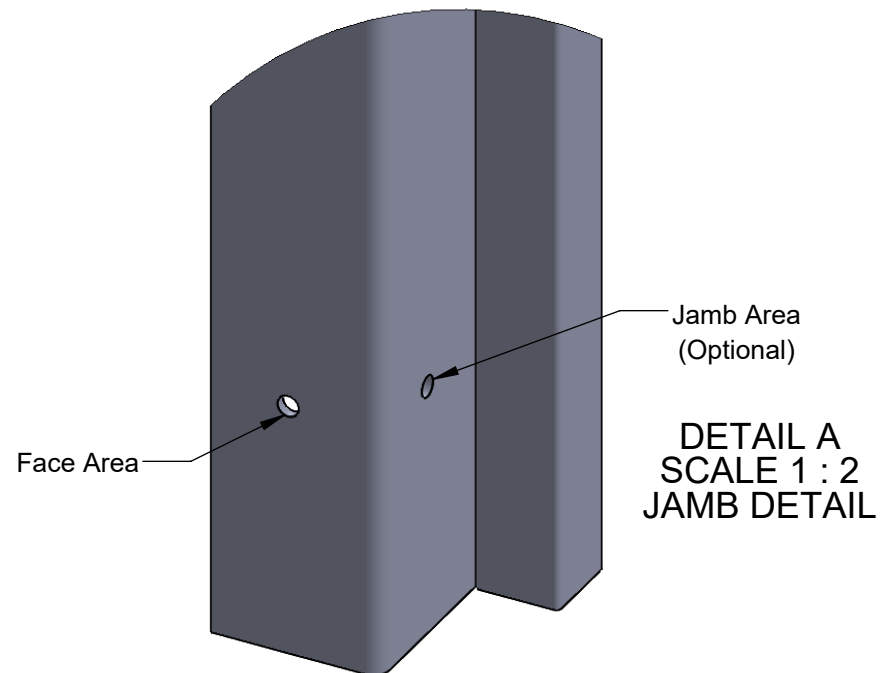


Step 2: Slam Latch (Optional)

- A. Install item as shown. It goes on the opposite side of the door that has the handle
- B. Use the 1/2" plate behind the slam latch

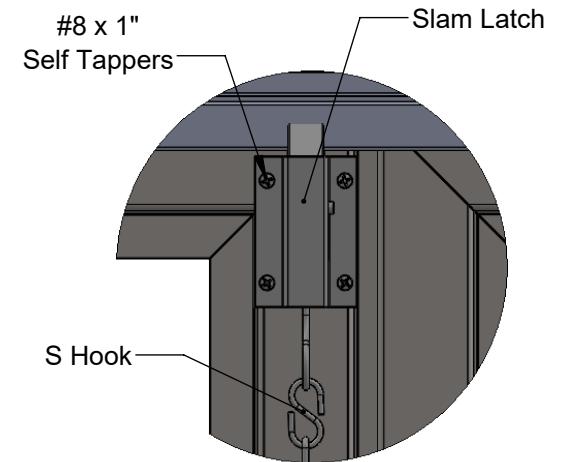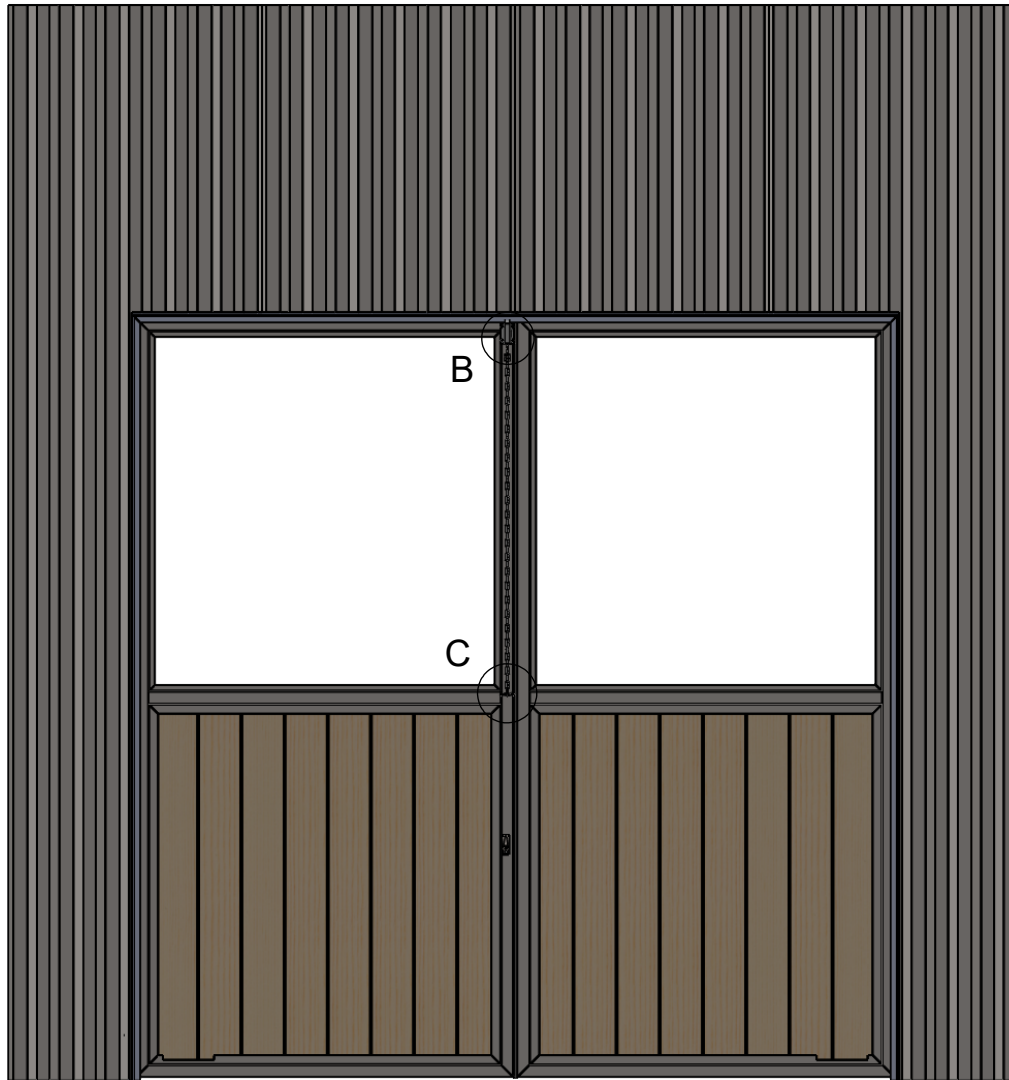

DETAIL B
SCALE 1 : 4

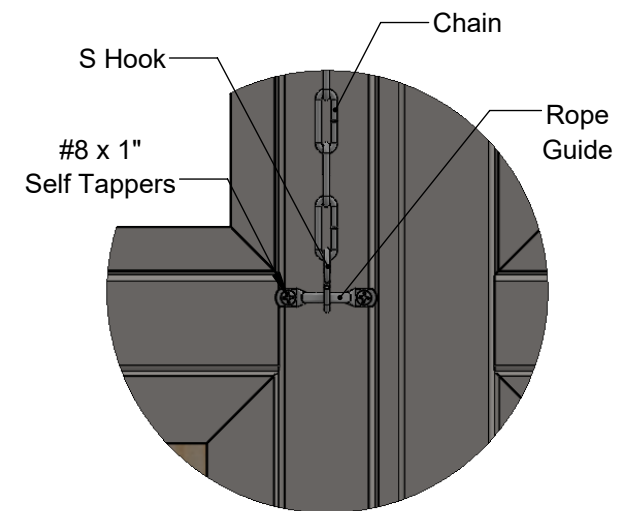


DETAIL C
SCALE 1 : 4



Step 3: Cane Bolt (Optional)

A. Install item as shown. Goes on the opposite side of the door that has the handle at the bottom of the door.

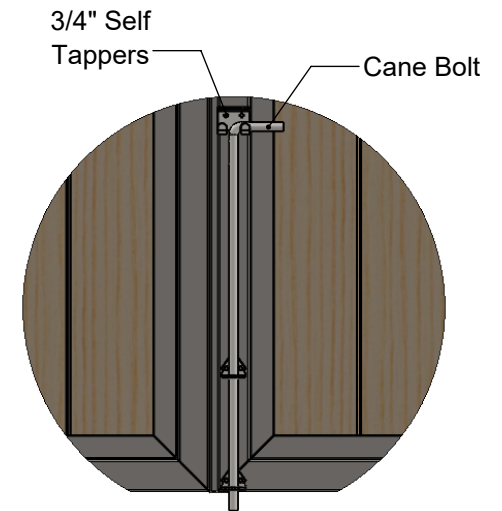


DETAIL D
SCALE 1 : 12



1602 Airpark Drive
Farmington, Mo. 63640
573-328-2977

Hinged Barn End Door
Installation Instructions

Back of Front
(Inside of Door)

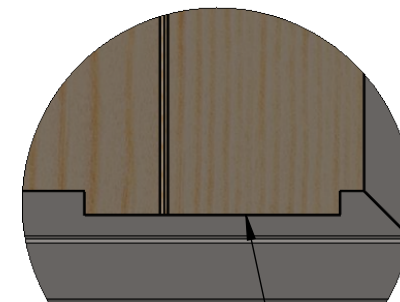

DETAIL E
SCALE 1 : 6

Wood Notch

Measure Inside channel
to inside channel

Wood Notch

E



1602 Airpark Drive
Farmington, Mo. 63640
573-328-2977

Step 4: Add Wood Fill.

- A. Measure inside channels and subtract 3/4" - Cut lumber to that length.
- B. Slide Wood Fill into each wood notch.
- C. Install lumber, Female or groove side first.
- D. Rip male or tongue side for width of last board to be put into place.

Hinged Barn End Door
Installation Instructions



1602 Airpark Drive
Farmington, Mo. 63640
573-328-2977