



Dutch Door
Installation Instructions

Contents and Tools Needed

Wood Fill
(Optional
Tongue & Groove)

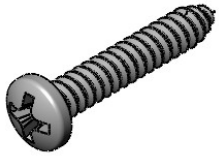


#12 x 1 1/4" PH
Wood Screw
(Optional if
Cross Bucks)
(Qty. 5per
CrossBuck)

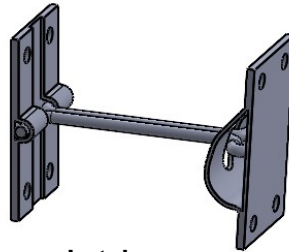


Latch
Hold Back
(Qty. 2)




#12 x 3/4"
Self-Tapper
(Qty. 8)

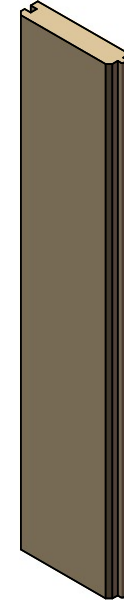

Door with
CrossBucks

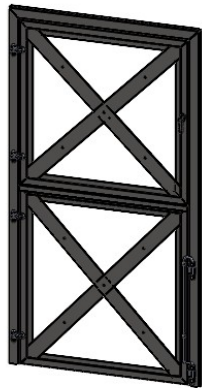

Door

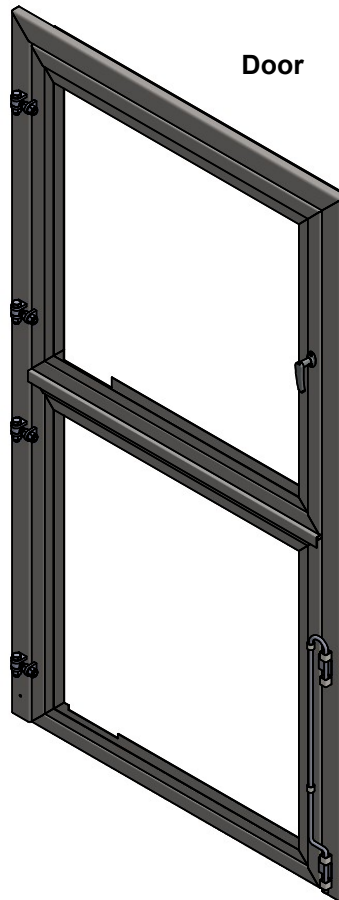

1602 Airpark Drive
Farmington, Mo. 63640
573-328-2977

Tools: Cordless Drill, Tape Measure, Level
Phillips Screw Bit, Square



Step 1: Pre-Hung Dutch Door

Before starting installation, the Threshold must be removed from the bottom of Door Frame. (This is tack welded into place for shipping purposes only)

A. This installation will require 2 people who can handle 100 - 150lbs. Place into a level and plumb rough opening. Make sure the door is pushed all the way into the rough opening until jamb is against the building. (The rough opening should be sized approximately 1/2" larger than the height and width of the leg of the frame that inserts into the wall).



B. Confirm the door is level and in the correct location, identify the side of the door with the hinges and drill holes in the jamb or face, of appropriate size for customer supplied hardware selection. Install screws in the holes you drilled. If the wall is out of plumb and the casing does not rest against it, shim behind the casing at the hinge locations to make the door plumb. Then move over to the unhinged side and fasten there as well. Once done you might need to adjust the hinges for the doors to open properly.

D. If Door or Latch is binding in the frame and not closing properly, it might be necessary to adjust the Door Jamb. Start by measuring the inside of the Door Jamb in several places from bottom to top to ensure Door Jambs are parallel with each other. If not, find the area where the Jamb is narrow and remove a shim from behind the Frame and re-tighten the Door Frame to the framework.

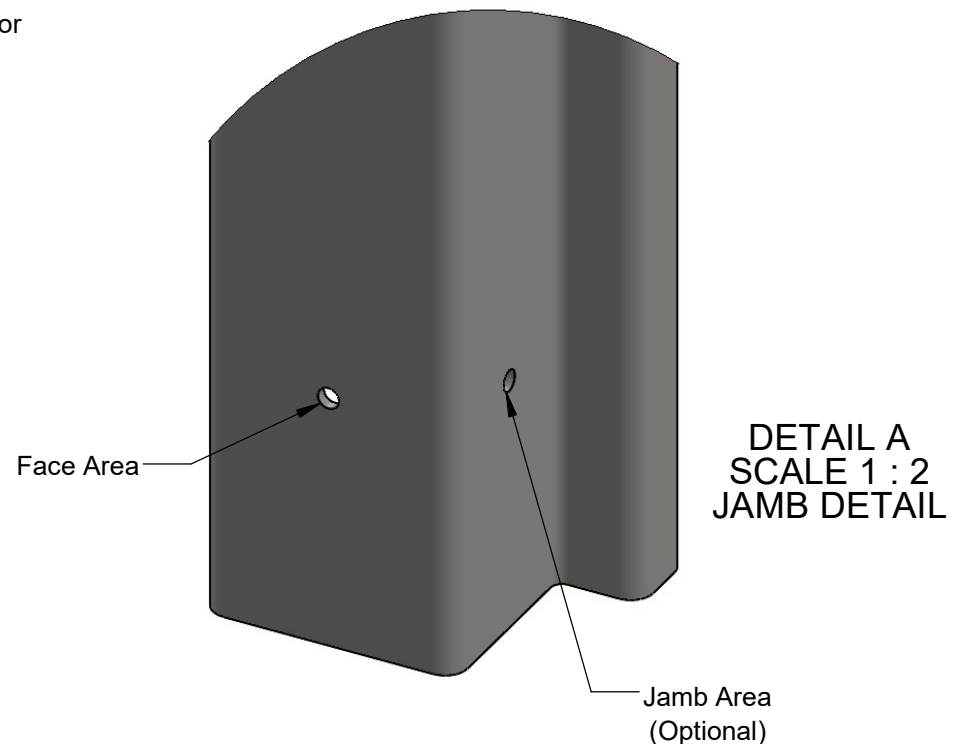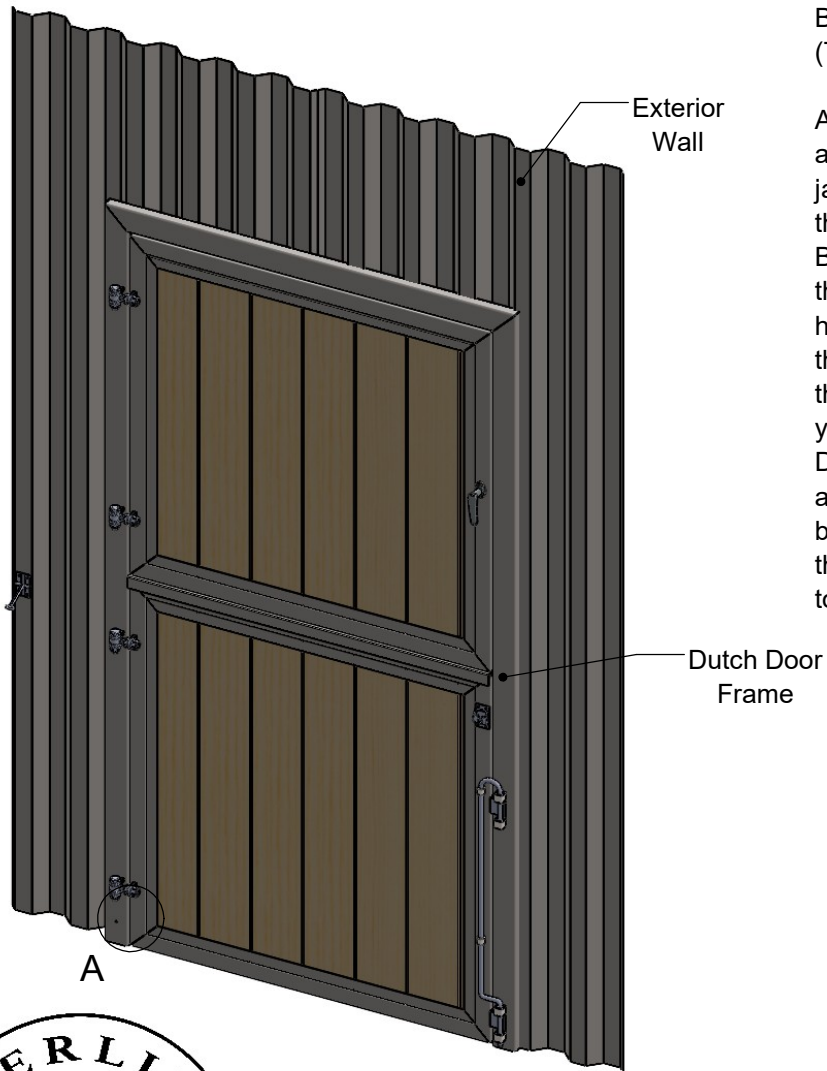


Step 2: Top Door Holder

A. Install item as shown. (This is to hold top panel in the open position. The placement is adjustable to customer preference.)

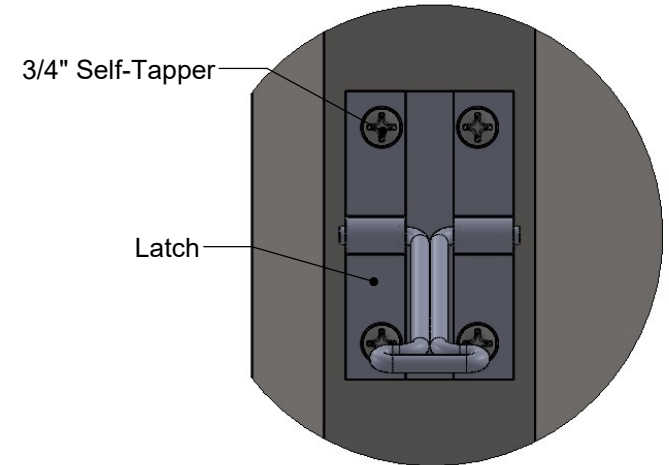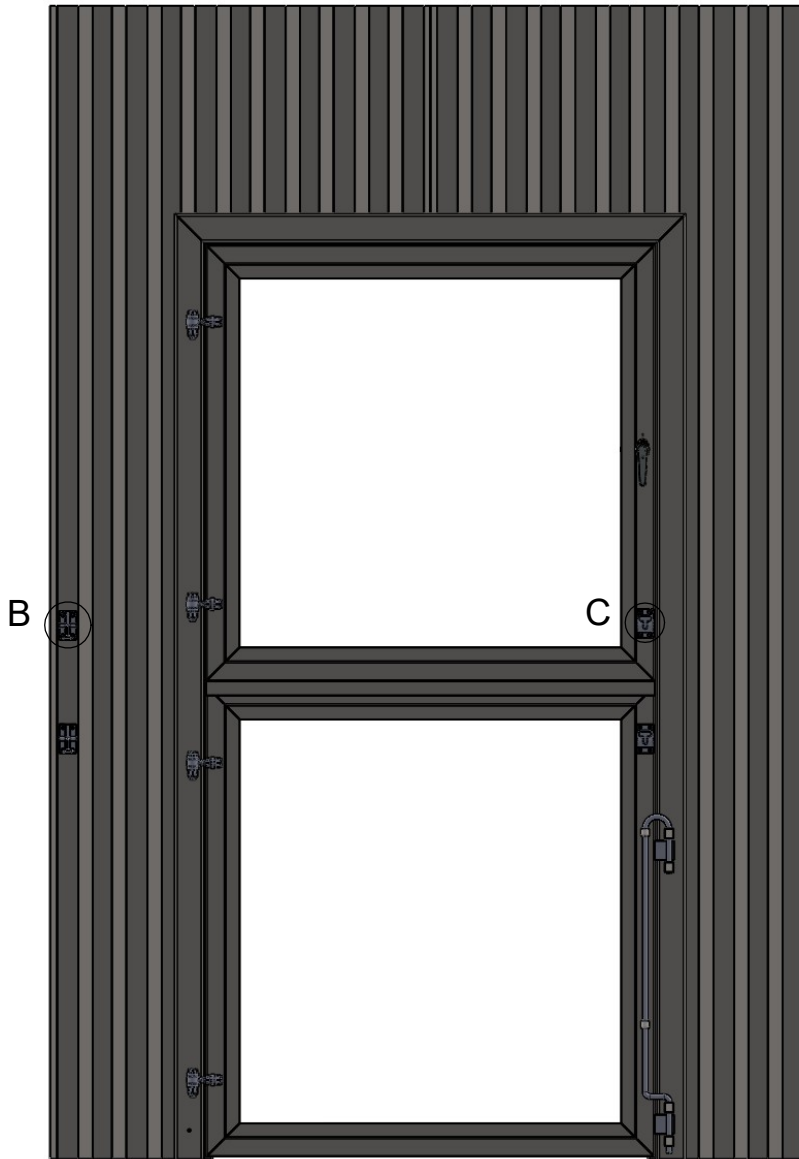

DETAIL B
SCALE 1 : 2

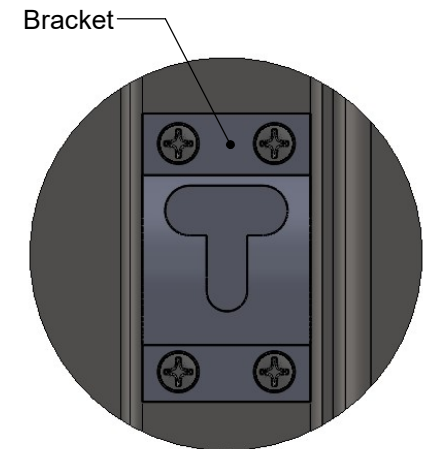


DETAIL C
SCALE 1 : 2




Dutch Door
Installation Instructions

Back of Front
(Inside of Dutch
Door)

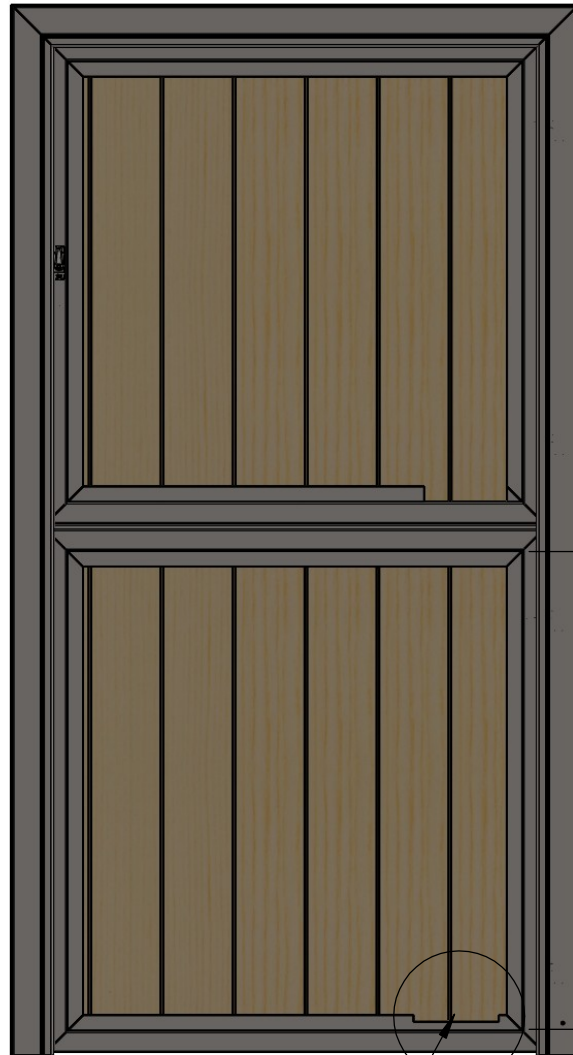

Wood Notch

Measure Inside channel
to inside channel

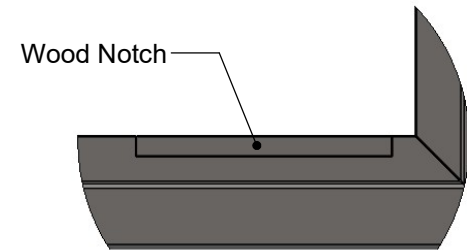

DETAIL D
SCALE 1 : 6


Step 3: Add Wood Fill.

- A. Measure inside channels and subtract 3/4"
Cut lumber to that length.
- B. Slide Wood Fill into each wood notch.
- C. Install lumber, Female or groove side first.
- D. Rip male or tongue side for width of last
board to be put into place.



1602 Airpark Drive
Farmington, Mo. 63640
573-328-2977

Dutch Door
Installation Instructions

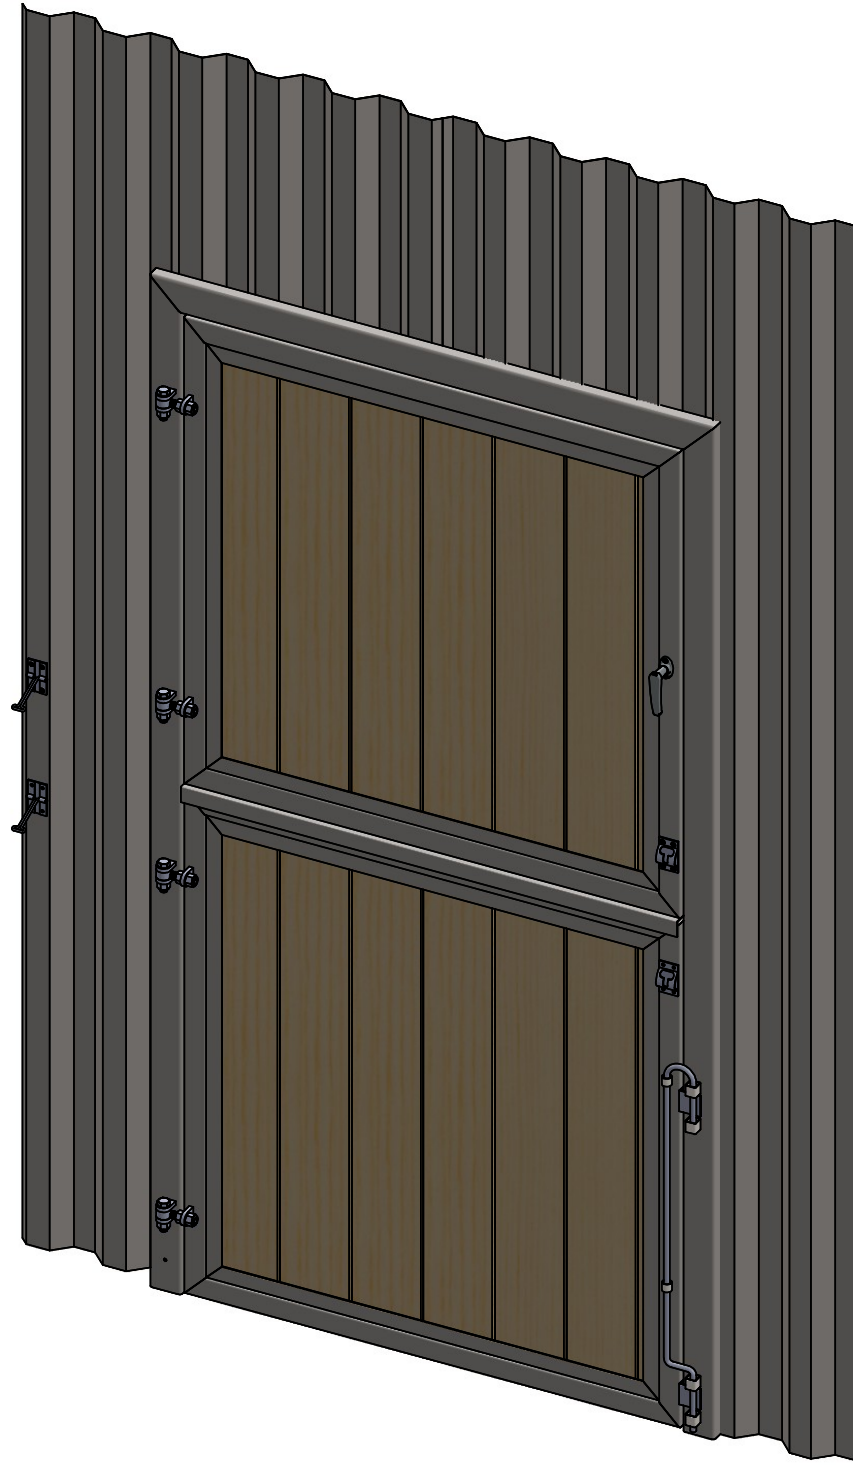

1602 Airpark Drive
Farmington, Mo. 63640
573-328-2977